Lenco

MES-204

User Manual
Twin Display Car DVD Player

Please read the instruction carefully before operating the unit.

For information and support, www.lenco.eu

LOCATION OF CONTROLS

Main Unit

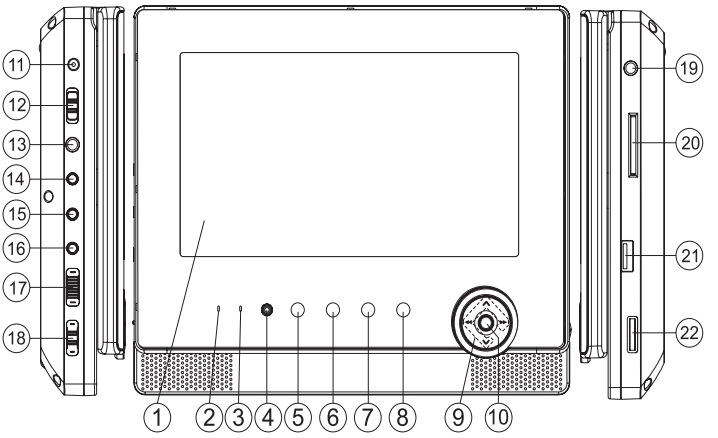

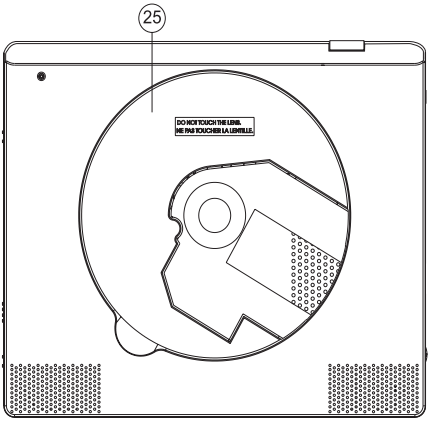

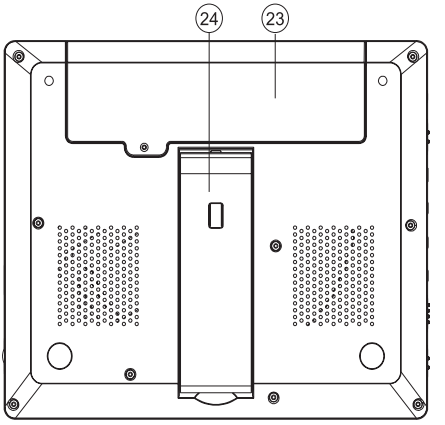

1. **LCD (TFT) Display**
2. **Power ON indicator** : When the unit is switched ON, the light will illuminate. The light will change from GREEN to RED if unit is switched to Standby mode.
3. **Charging indicator**: The charging indicator will go off when the battery becomes fully charged.
4. Remote sensor
5. **LCD MODE / DVD/ USB/SD button**: To access LCD mode and source mode.
   Short press to enter LCD mode. Press ⏮, ⏭ on main unit to select the aspect ratio between 16:9 and 4:3. Press ∧ , ∨ to select Brightness, Contrast or Color, then press ⏮ , ⏭ on main unit to adjust its level.
   Long press to enter source mode. Press ∧ ,∨ to select DVD, USB or Card mode and then press **Enter** to confirm.

6. **SETUP button** : To enter the Setup menu
7. ■ **button :**Press once to pre-stop (resume with ▶II), press again to stop playback.
8. ▶II **button** : To start and pause the playback
9. I◀◀ ▶▶I : To directly access the previous or next chapter (DVD) or track (CD).
   ∧ , ∨ , I◀◀, ▶▶I **buttons:** To navigate through the on-screen menus.
10. **Enter button**: To confirm the selection during menu navigation.
11. **DC IN 9V jack**
12. **Power ON/OFF switch**
13. **Headphone jack**
14. **COAXIAL jack**
15. **AUDIO jack**
16. **VIDEO jack**
17. **AV IN/OUT switch** : To switch between AV IN and AV OUT.
18. **HOLD button** : Prevent any unwanted function changes in PLAY or STOP mode.
19. **Headphone jack**
20. **SD/MMC card slot**
21. **USB port**
22. **VOLUME control** : To adjust the volume
23. **Battery compartment(Battery not included)**
24. **Stand** : Lift up the stand from its groove; Support it against the stand or draw the stand out and then fix it in position by clicking down the LOCK button.
25. **CD compartment :** Lift up the front panel to insert a disc.

Monitor

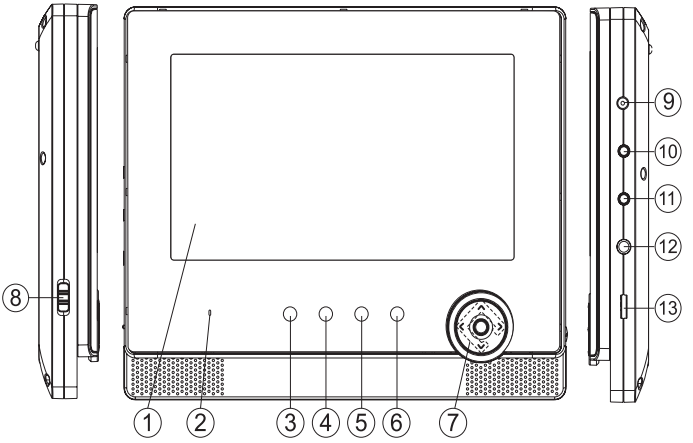

1. **LCD (TFT) Display**
2. **Power ON indicator**: When the monitor is switched ON, the light will illuminate.
3. **MUTE button** : To mute or restore sound of the monitor
4. **4:3 button**: To change the aspect ratio to 4:3.
5. **16:9 button**: To change the aspect ratio to 16:9.
6. **LCD MODE button**: To access LCD mode for adjusting the Brightness, Contrast and Color level of the monitor.

7. ∧ ∨ < > **buttons** : Use these buttons to adjust the Brightness, Contrast and Color level of the monitor.
8. **Power ON/OFF switch**: To switch on the monitor
9. **DC IN 9V jack**
10. **VIDEO jack**
11. **AUDIO jack**
12. **Headphone jack**
13. **VOLUME control** : To adjust the volume
14. **Stand** : Lift up the stand from its groove; Support it against the stand or draw the stand out and then fix it in position by clicking down the LOCK button.

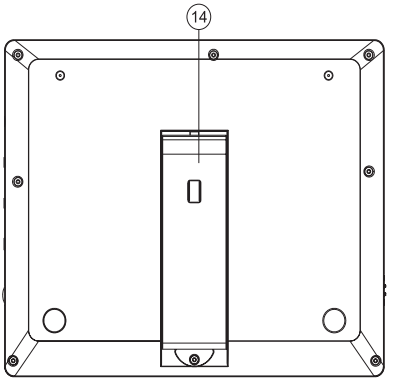

Remote control

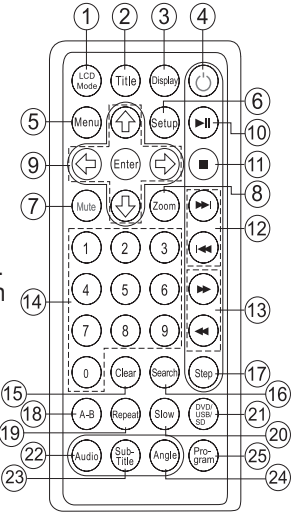

1. **LCD Mode** : To access LCD mode of the unit.
2. **Title :** To access the disc title menu
3. **Display** : To show status information on the screen.
4. ⏻ **(Standby)**: To turn unit on /off (STANDBY mode).
5. **Menu** : To access the disc menu during playback ; Turn PBC ON/OFF for VCD.
6. **Setup**: To enter the Setup menu
7. **Mute** : To mute or restore sound.
8. **Zoom**: To access the zoom function
9. ⇦ ⇨ ⇧ ⇩ : To navigate through the on-screen menus. **Enter** : To confirm the selection during menu navigation
10. ▶II : To start and pause the playback
11. ■ : Press once to pre-stop (resume with ▶II), press again to stop playback.
12. ▶▶I / I◀◀ : To directly access the next or previous chapter (DVD) or track (CD).
13. ◀◀ / ▶▶ : To start reverse or forward accelerated playback.
14. **0,1,2…9** : Number entry
15. **Clear** : To clear inputs.
16. **Search** : To search for a desired chapter or time.
17. **Step** : To play frame by frame
18. **A-B** (Repeat A-B): To repeat section A to B
19. **Repeat**: To repeat playback .
20. **Slow** : To play at slow motion.
21. **DVD/USB/SD** : To select between DVD, USB and Card mode
22. **Audio** : To change the audio setting
23. **Subtitle** : To change the subtitle setting
24. **Angle**: To access the camera angle function for DVD disc
25. **Program**: To program playback sequences.

Note: “ ” will be displayed if the function you select is not available.

Installing Battery
Insert 2 “AAA/ UM4” batteries to the remote control prior to use. Make sure to match their polarities (+/-) to the markings inside the compartment.

NOTES:
- Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.
- In order to avoid leakage, always remove the batteries when unit will not be used for a long period of time.
- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

ACCESSORIES

AC/DC adaptor x2	AV cable x1
Headphones x2	Remote control x1
Car mounting bag x2	Car adaptor with AV cable x1

POWER SUPPLY

Using the AC adaptor
The supplied AC adaptors are suitable for use on AC mains supplies of 100-240V~ and should only be connected to a mains supply within these parameters.

There are 2 types of AC adaptors supplied, one is for main unit, the other is for the monitor.

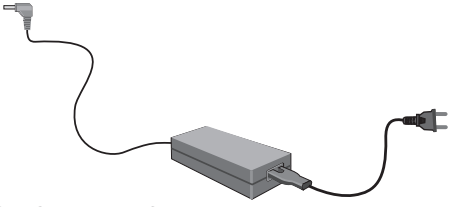

AC/DC adaptor for main unit
Input: AC 100-240V~ 50/60Hz
Output: DC 9V ⎓ 2A

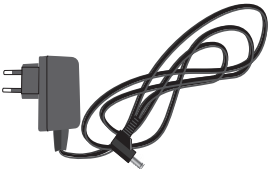

AC/DC adaptor for Monitor
Input: AC 100-240V~ 50/60Hz
Output : DC 9V ⎓ 1A

Caution: Only use AC adaptors of the type specified here. Failure to do so may cause a fire or damage the player or the monitor.

Using the main unit and monitor together

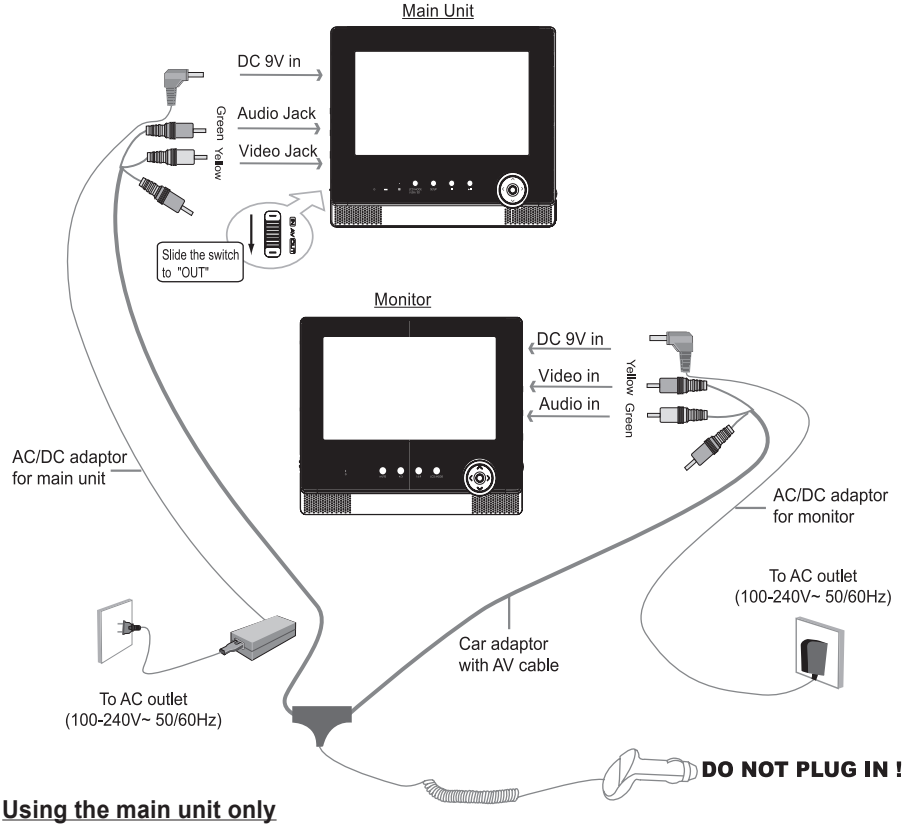

Using the main unit only

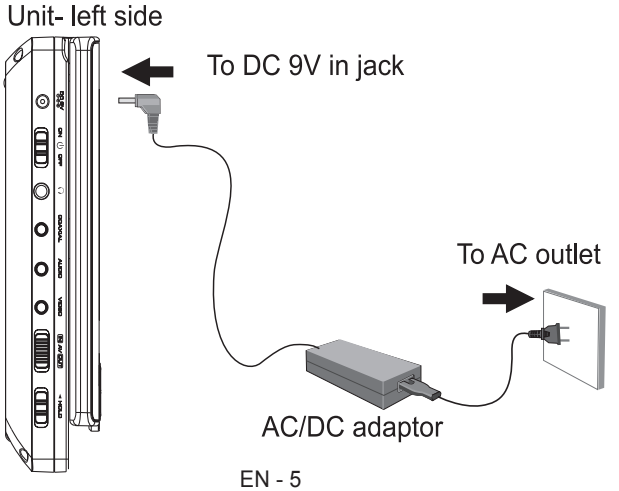

Cautions:
*The AC adaptor included with this unit is for its use only. Do not use it with other equipment.
*Turn off the unit before unplugging the AC adaptor from the unit so as to avoid the unit being damaged.
*When the unit is not going to be used for long time, disconnect the AC adaptor from the AC outlet.
* Be sure to use it near the wall outlet and easily accessible. If a malfunction occurs, disconnect the plug from the wall outlet at once.
*AC adaptor is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the AC adaptor of the apparatus shall be disconnected from the mains socket outlet completely.
*Never use an AC adaptor that is damaged, route power lead in a safe manner and make sure it is not subjected to trapping or pinching. If the power lead is damaged refer to a qualified service agent.

Using the car plug

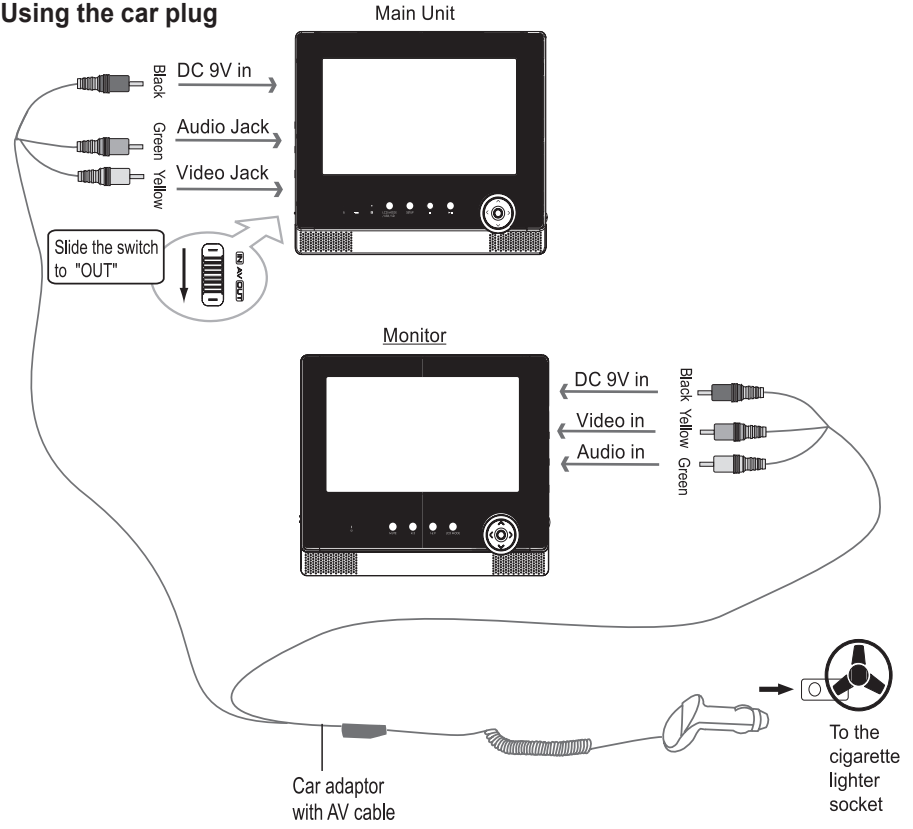

WARNING: Disconnect this car power adaptor when not in use. Not for use in 24V vehicles.

Cautions

• Use only the included 12V car power adaptor. Use of any other 12V car power adaptor could damage the unit.

• The 12V car power adaptor included is for use with this unit only. Do not use it with any other equipment.

• In the interest of traffic safety, drivers should not operate the unit or view videos while driving.

• Make sure the unit is fastened correctly to prevent from falling in the vehicle in the event of an accident.

• When the inside of the cigarette lighter socket is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the cigarette lighter socket before use.

• After use, disconnect the car power adaptor from both the unit and cigarette lighter socket.

CONNECTIONS

Disconnect all devices from the mains supply before connecting.

Connecting to the Amplifier

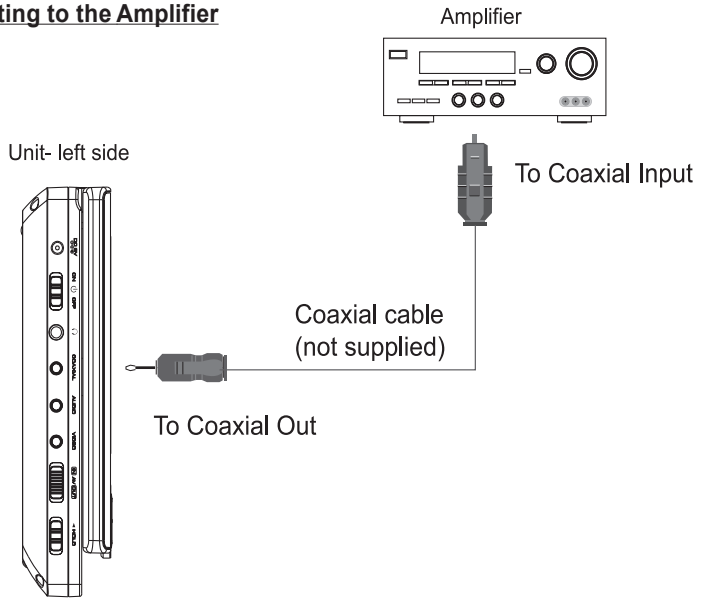

Connecting to TV

Slide the **AV** switch to “IN” position to input the AV signal.
Slide the **AV** switch to “OUT” position to output the AV signal.

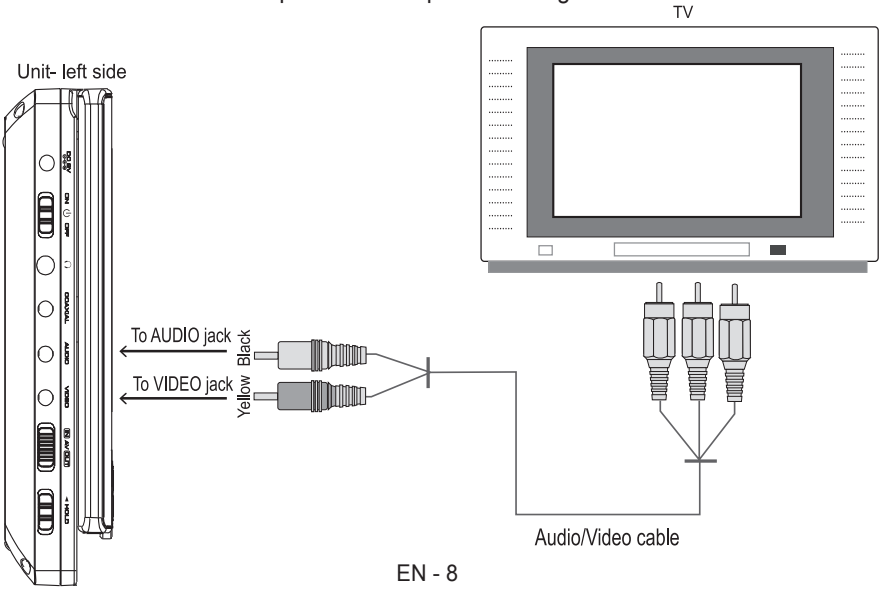

USING HEADPHONES / EARPHONRS

Maximum output voltage ⩽ 150mV
HEADPHONE VOLUME WARNING
Connect earphones with the volume set low and increase it if required. Prolonged listening through some earphones at high volume settings can result in hearing damage. When headphones/earphones are connected, no sound will be emitted from the unit's speaker. Caution: Avoid listening to sound at levels which may be harmful to your ears.

Continuous use of earphones at high volume can damage the user's hearing.

LCD MODE

Press **LCD MODE/ DVD/USB/SD** button on main unit or **LCD MODE** button on remote control to enter LCD mode of the unit. Press ⏮, ⏭ on main unit or ⇦, ⇨ on remote control to select the aspect ratio between 16:9 and 4:3. Press ∧ , ∨ on main unit or ⇧, ⇩ on remote control to select Brightness, Contrast or Color, then press ⏮, ⏭ on main unit or ⇦ , ⇨ on remote control to adjust its level.

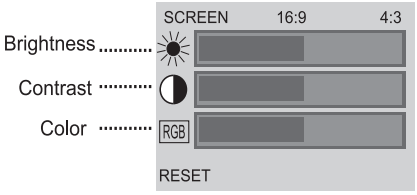

DISC PLAYBACK

Region Management Information
Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVD discs. If the Region number printed on the DVD disc does not correspond to the Region number of this unit, this unit cannot play that disc.
The region number of this unit is 2.

Basic Playback
1.Slide **ON/OFF** switch to "ON" position to turn ON the unit. The power ON indicator will go on.
2.Lift up the front panel.
3.Insert a disc with label facing you until you hear a "click".
4. Close the front panel. It takes a short while for your unit to load the disc. After loading, the unit will automatically bring you to the main menu of the DVD or start playing the DVD. If the unit does not automatically start playing the DVD, press ⏯ .

Warning: Do not touch and wait that the disc stops itself.

Accelerated play
While the disc is playing, press ◀◀ or ▶▶ one or more times to vary the speed and direction of the accelerated play. Press ⏯ to resume normal playback.

Frame advance (DVD & VCD)
1. While the disc is playing, press **Step** once.
2. Press **Step** a number of times to advance forward image by image
3. Press ⏯ to resume normal playback.

Variable slow motion (DVD & VCD)
1. While the disc is playing, press **Slow** button.
2. Press the **Slow** button repeatedly to change slow speed.
3. Press ▶II to resume normal playback.

Changing chapter/track
While the disc is playing, press ▶▶I or I◀◀ to go immediately to the next or previous chapter(DVD), or to the next or previous track(CD, VCD).

Zoom (DVD, VCD)
While a disc is playing, press **Zoom** until you reach the zoom size you want. The button cycles through x2,x4,x1.

ADVANCED FUNCTIONS

On screen display
While the disc is playing, press **Display** button repeatedly to display the playback information.
DVD:

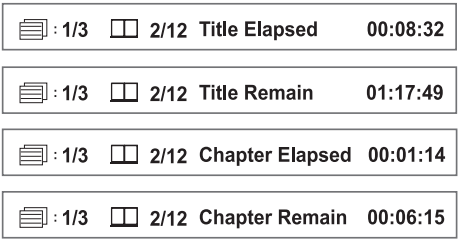

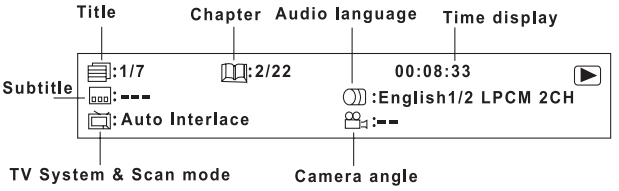

CD:

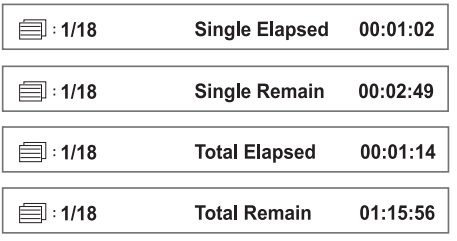

Search a desired section

1. Press **Search** button to enter the search mode.
2. Use number buttons to input the chapter number (DVD) or playback time (DVD,CD). Then press **Enter** button to jump to the target location immediately.

Note: Press **Clear** button to cancel the incorrect input.

DVD:

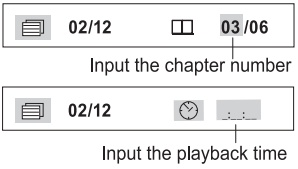

CD:

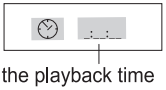

PLAY MODES

Repeat playback

While the disc is playing, press the **Repeat** button repeatedly to select a play mode:
DVD: Repeat All, Repeat Title, Repeat Chapter, Repeat Off;
VCD(PBC OFF only) and audio CD: Repeat All, Repeat Track, Repeat Off;
MP3: Repeat Track, Repeat Folder, Repeat All, Repeat Off.

Note:

- Some DVD/VCD discs do not allow repeat function.
- Skip function is not available for Repeat Chapter (DVD) and Repeat Track (CD, MP3 files).

A-B repeat

To repeat a sequence between two points A and B, press the **A-B** button at the beginning of the sequence you want to repeat. Then press the **A-B** button again at the end of the sequence. Then the sequence is played repeatedly until you press **A-B** to resume normal playback.

Note: Some DVD discs do not allow A-B repeat function

Program playback (DVD,VCD and audio CD)

With this option, you can choose and program the playback order.

1. Insert a disc.
2. In playing or stop mode , press the **Program** button. The Program menu appears.

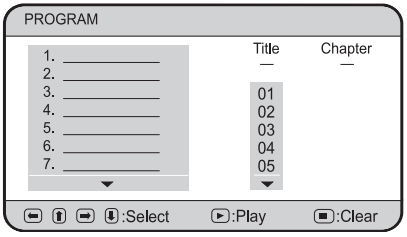

3. Press ⇦ ⇨ ⇧ ⇩ buttons to select the title and press **Enter** button to confirm.
4. Press ⇦ ⇨ ⇧ ⇩ buttons to select the chapter and press **Enter** button to confirm.
Note: For CD, press ⇦ ⇨ ⇧ ⇩ buttons to select desired track and press **Enter** to confirm.
5. Repeat step 3-4 until you have finished programming your selections or when you have programmed the maximum 20 tracks.
6. Press **Clear** or ■ button to delete.
7. Press ▶|| button to start playback. Press **Program** to cancel.

USB OR SD/MMC PLAYBACK

You can connect a USB flash drive (not included) to the USB connector port or a SD/MMC card (not included) to the memory expansion card slot on the unit to play DivX movies as well as sound & picture files.
1. Plug the USB flash drive into the USB port on the unit. Plug the memory card into the memory expansion card slot.
2. Long press **LCD MODE/DVD/USB/SD** button on unit OR press once the **DVD/USB/SD** button on remote control and the screen displays as follows:

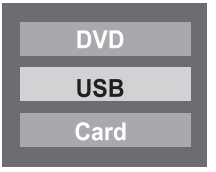

3.Use ⇧/⇩ button to select " USB" or "Card " and then press **Enter** to confirm.
4. To exit USB/ Card mode, select "DVD" in the source menu and press **Enter** to confirm, or just unplug it from the port when it is not in work.

For operation of playing files on the USB flash drive or SD/MMC card, please refer to the section "PLAYING MP3/DIVX/PICTURE FILES"
Note:
• It is recommended USB flash drive or the SD/MMC card is plugged when the unit is in OFF mode.
• There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if your device is not supported.
• Some SD/MMC card may be incompatible.

PLAYING MP3/DIVX/PICTURE FILES

DivX®, DivX™ Certified, and associated logos are trademarks of DivX, Inc. and used under license.

This unit can play MP3, DivX and Picture files recorded on CD-R/CD-RW discs, USB flash drive and SD/MMC card.

1. Insert a disc.

2.It will take a short while for the system's reading data and then playback starts automatically.

3. **MP3 files**: Use ⇦ ⇨ ⇧ ⇩ buttons to select a file in the menu and press **Enter** or ▶II to start playback.

DivX/Picture files: Press **Menu** button to return to the main menu. Use ⇦ ⇨ ⇧ ⇩ buttons to select a file in the menu and press **Enter** or ▶II to start playback.

4.Press ■ button twice to stop playback.

Special functions:

File Type

With this function, you can set the media file types that you want to play.

1.In stop mode(For picture files, press **Menu** button to enter main menu), use ⇦ , ⇨ button to select " File Type", and press **Enter** to confirm. Following window will appear:

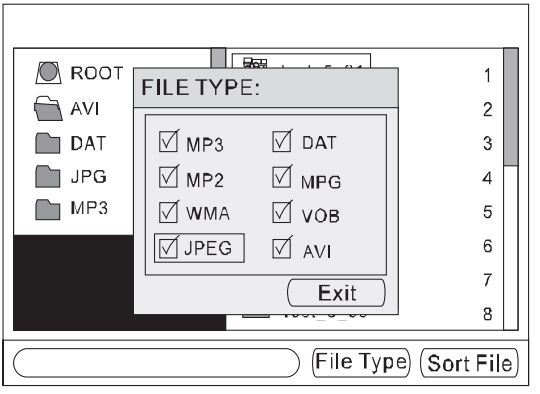

2.Use ⇦ ⇨ ⇧ ⇩ to select a file type, press **Enter** button to turn on or off the display file type. The disappearance of " ✓ " before a file type indicates that this type of files will not be displayed.

3. Select "Exit" and press **Enter** to exit .

***Sort file**

With this function, you can set the file sorting method and sequence.

1. In stop mode (For picture files, press **Menu** button to enter main menu), use ⇦ , ⇨ button to select " Sort File" and press **Enter** to confirm. Following window will appear:

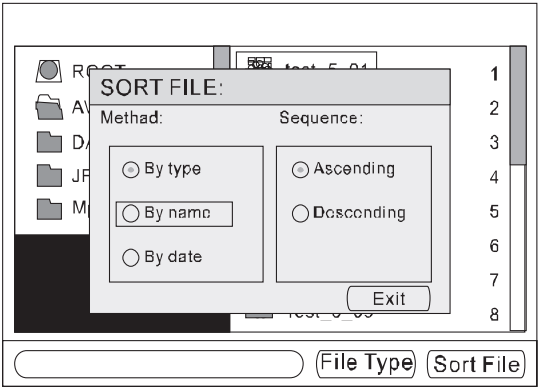

2. Use ⇦ ⇨ ⇧ ⇩ and **Enter** button to select the file sorting method ("By type", "By name" or " By date") and display sequence ("ascending" or "descending ").

Picture (Jpeg) playback:

Thumbnail mode

1. During Jpeg playback, press ■ button once to enter Thumbnail mode.

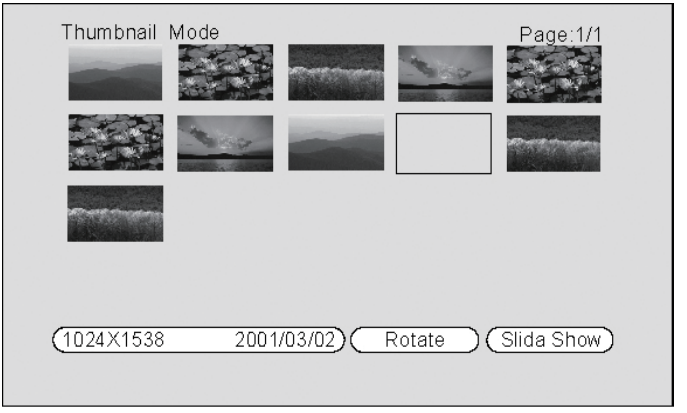

2. Use ⇦ ⇨ ⇧ ⇩ to select "Rotate" and press **Enter** to access Rotate mode (For operation refer to "Rotate mode" below). Or select "Slide Show" and press **Enter** button to start picture slide show.

Rotate mode

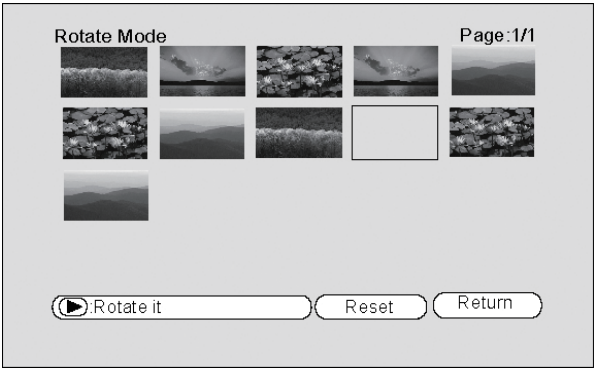

In rotate mode, press ⇦ ⇨ ⇧ ⇩ to select a picture and press ▶II to rotate the picture 90 degree clockwise.
Select “Reset” and press **Enter** to reset the picture to original direction.
Select “Return” and press **Ente**r to return to Thumbnail mode.

Zoom function:
* During Picture(Jpeg) playback, press **Zoom** until you reach the zoom size you want. The button cycles through
150% → 200% → 25% → 50% →100%.
* When the magnification level is greater than Normal 100%, use the ⇧ / ⇩ to pan up or down the magnified picture.
*When the magnification level is equal to 100%, use ⇦ ⇨ ⇧ ⇩ buttons to rotate or reverse the picture.

Notes:
• Avoid long file names! It is suggested to name the file names using 11 or fewer characters.
• The total number of files on the disc should not exceed 254.
• The maximum number of directories should not exceed 32.
• The maximum depth level of directories should not exceed 4.

Supporting format:
MP3:32kbps-320kbps
JPEG:up to 8000X6000 pixels and file size less than 8MB
MPEG :MPEG-1 (ISO/IEC 11172-2), MPEG-2 (ISO/IEC 13818-2), MPEG-4 ASP(Divx)
AVI:up to 720X576
VOB(DVD):720 x 480i, 720 x 576i, 720 x 480p, 720 x 576p
DivX:3.11 / 4.0 /5.0

Notes:
For playing files on USB flash drive or SD/MMC card, you should plug in the USB flash drive or SD/MMC card when the unit is in OFF mode. Turn ON the unit and use **DVD/ USB/SD** button to select USB or Card mode.

SETUP MENU

Navigating the setup menu

1. Press **SETUP** to display the setup main menu.
2. Press ⇧ or ⇩ to select a menu icon.
3. Press ⇨ to access the submenu and ⇧, ⇩ to select an option.
4. Press ⇨ and then ⇧, ⇩ to select one of the available options under submenu.
5. Press **Enter** to confirm your selection.
6. Press ⇦ to return to a previous menu.
7. Press **SETUP** to exit from the setup menu.

Language Setup

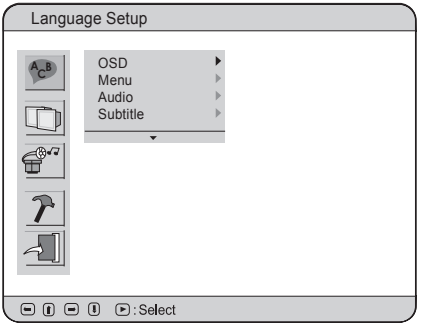

*** OSD**

•To select the language of unit's menus.

*** Menu (menu language)**

•To select the language of the DVD menus.

•If the selected language is not available on the disc, the disc's language will be used instead.

***Audio**

•To select the dialog language.

•If the selected language is not available on the disc, the disc's language will be used instead.

•To change the dialog language during playback, press **Audio** on the remote control.

***Subtitle**

•To select the language of the DVD subtitles. Select "OFF" to turn off the subtitles.

•If the selected language is not available on the disc, the disc's language will be used instead.

•To change the subtitle language during playback, press **Subtitle** on the remote control.

*** Encoding**

To set the encoding mode between " Western European" and " Central European".

If your DivX video file includes subtitle file, use this to select your preferred subtitle language.

Screen Setup

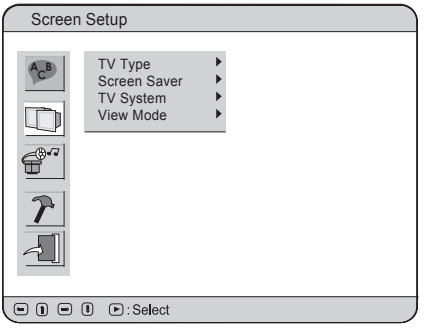

*** TV Type**
4:3 PS (Panscan)
• When wide-screen video is played, this mode clips the right and left sides of the image so that it can be viewed on a conventional screen.
• Some wide-screen DVDs that do not permit Pan Scan mode playback are automatically played in letterbox mode (black bands top and bottom).

4:3 LB
• When wide-screen video is played in this mode on a conventional screen, black bands appear at the top and bottom of the screen.

16:9 (Wide screen)
• This is the correct mode for playing wide-screen videos on a wide-screen TV.
Notes :
•The visible picture size is preset on the DVD disc. Therefore the playback picture of some DVD discs may not conform to the picture size you select.
•When you play DVD discs recorded in the 4:3 aspect ratio, the playback picture will always appears in the 4:3 aspect ratio regardless of the TV shape setting in the function setup menu.

***Screen saver**
To set screen saver **ON** or **OFF**.

***TV System**
•To select your TV system among **NTSC , PAL** or **Auto.**

*** View Mode**
To set the view mode among **Fill, Original, Height Fit, Width Fit** or **Auto Fit**.
Note: This function is only available for DivX playback.

Audio Setup

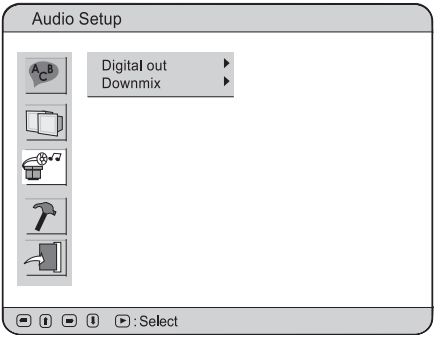

*** Digital out**
SPDIF/PCM
Choose this setting, if your DVD player is connected to a 2-channel digital stereo amplifier. When playing a disc recorded with Dolby Digital and MPEG audio formats, audio signal will be modulated into a 2-channel PCM signal and it will be output from the Coaxial Output jack.
SPDIF/RAW
Choose this setting, if your DVD player is connected to a power amplifier with a coaxial cable. When playing a disc recorded with Dolby Digital and MPEG audio formats, the corresponding digital signals will be output from the Coaxial Output jack.
OFF
When digital output is not in use, it is recommended to turn “OFF” the digital output setting for the purpose on minimizing circuit interference.

*** Downmix**
Lo/Ro: Stereo audio signal output
Lt/Rt: left and right soundtrack audio output

Custom Setup

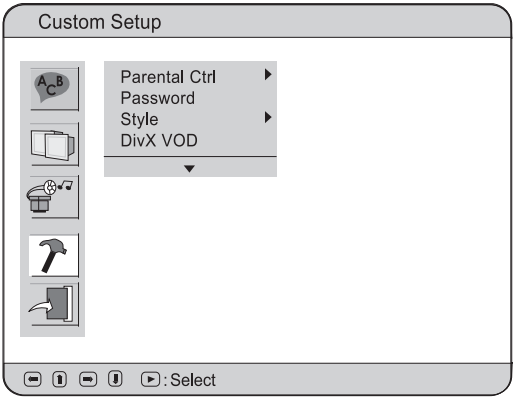

***Parental ctrl**
Some DVD discs are equipped with a password function and are rated according to their content. The contents allowed by parental lock level and the way a DVD disc is controlled may vary from disc to disc. For example, if the disc allows, you could lock-out violent scenes unsuitable for children or you could lock out playback of the disc altogether.

You cannot play DVD discs rated higher than the level you selected unless you cancel the parental lock function.
The parental lock levels are equivalent to the following ratings.
Level 1 : Kid Safe
Level 2 : G
Level 3 : PG
Level 4 : PG-13
Level 5 : PG-R
Level 6 : R
Level 7 : NC17
Level 8 : Adult

You must input the four-digit password to access the Parental settings. **The initial password is 8888.**
Then select the rating by ⇧ , ⇩ and then press **Enter** to confirm.

*** Password**
Enter the old password, the new password, and the new password again to verify and change the Parental settings password. Restoring the player's default settings will not reset the password. **Do not forget the password; this password cannot be reset.**

*** Style**
To set the style of setup menu.

***Divx (R) VOD**
• Some DivX Video-On-Demand files required registration code, please get the code of your DVD player
.• Registration code is for DivX Video-On-Demand only, do not apply this code for another applications or websites.

*** Angle mark**
ON : To show angle mark when a disc with multiple camera angles is playing. You can view different camera angles of a DVD disc by pressing **Angle** button on remote control.
OFF : To hide angle mark.
NOTE: This function is only available for discs encoded with multiple camera angles.

***Defaults**
To reset all settings to their initial factory state, except for parental level and password.

PLACEMENT

Mounting in the Vehicle

Use the supplied car mounting bags to install the main unit and monitor on the back of the vehicle's headrests. Tightly wrap the mounting strap around the headrest.

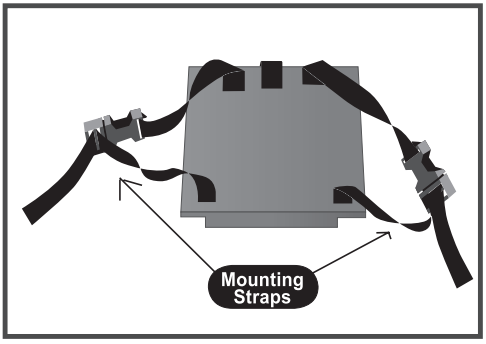

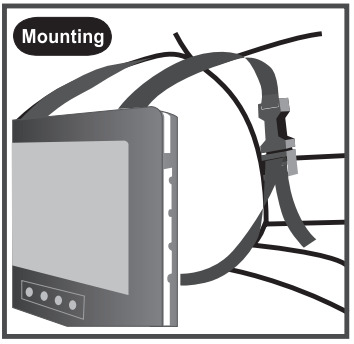

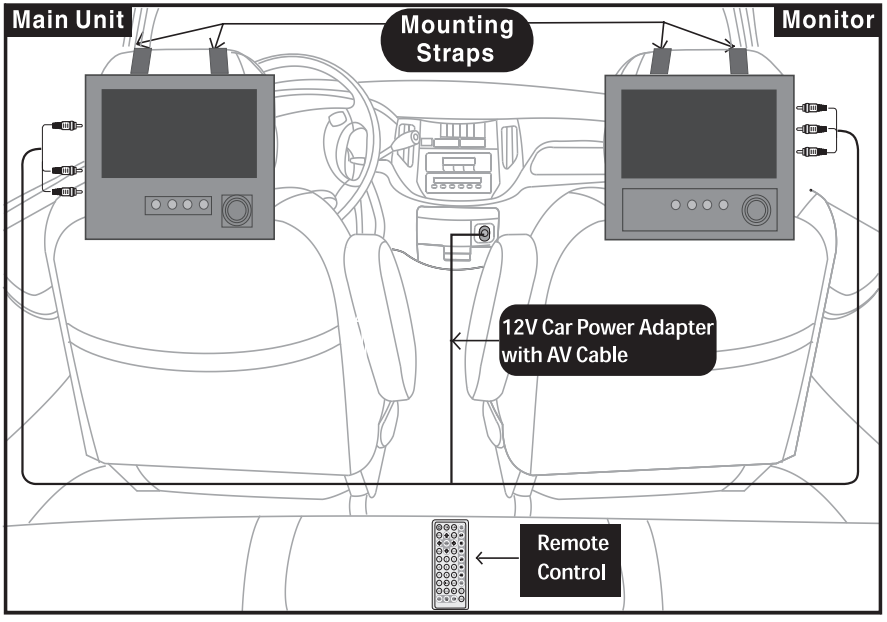

SAFETY WARNING!

•On no account should this unit be used by the driver of a moving motor vehicle, or left unsecured in the vehicle whilst driving.

•If this unit is being used by a passenger in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device (i.e. airbag, seat belt etc.) that is fitted.

• All passengers should wear seat belts when using this unit in a moving vehicle.

•If in doubt, please contact your vehicle manufacturer for further advice.

•Using other car power adaptors could damage the unit.

SAFETY INSTRUCTION

ATTENTION: To reduce the risk of electric shock, do not remove the cover or back. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of “dangerous voltage” inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam. Class 1 laser product.

IMPORTANT SAFETY INSTRUCTIONS

NEVER fit make shift stands or legs with woodscrews. Use only approved supports and fasteners specially designed for the equipment.

NEVER let anyone, especially children, push objects into holes, ventilation slots or any other opening; this could result in fatal electric shock!

ALWAYS disconnect the AC adaptor when you are not going to use the unit for a long period of time.

ENSURE that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions given. Switch off the main supply when making or changing connections.

CONSULT your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DON’T continue to operate the equipment if it is damaged in any way or if it does not function normally. Disconnect the AC adaptor and consult your dealer.

DON’T leave equipment switched on when it is unattended unless it is part of it’s normal function to operate in your absence, for example a video cassette recorder with timed recording facility.

LISTEN to headphones at moderate volume levels; high volume levels can permanently damage your hearing.

WARNING:
• AC adaptor is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the AC adaptor of the apparatus shall be disconnected from the mains socket outlet completely.
• Never use an AC adaptor that is damaged, route power lead in a safe manner and make sure it is not subjected to trapping or pinching. If the power lead is damaged refer to a qualified service agent.
• Place the unit on a flat and even surface.
• Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on carpeting.
• To avoid magnetized, do not place the unit near speaker or magnet.
• Do not use this unit in direct sunlight or leave the unit in a closed automobile (or yacht, etc) where it would be exposed to high temperatures above 40°C.
• It also should not be placed in temperatures less than 5°C or greater than 35°C.
• No naked flame sources such as lighted candles should be placed on the AC adaptor and main unit.
• Do not use the unit immediately after transportation from a cold place to a warm place, condensation problem may result.
• The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
• No naked flame sources, such as lighted candles, should be placed on the apparatus.
• The use of apparatus in moderate climates.
• The apparatus should not be exposed to dripping or splashing.
• Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
• Do not place objects filled with liquids, such as vases, on the apparatus.
• The marking plate is located on the back of unit.
• Do not throw batteries in fire!
• Excessive sound pressure from earphones and headphones can cause hearing loss.
• Under the influence of electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require user to power reset.

MAINTENANCE

Cleaning
Be sure to turn the unit off and disconnect the AC adaptor before maintaining the unit.
- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasive or alcohol-based products risks damaging the appliance.
-If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorized engineer.

Note on disc
* Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunctions.
* Do not place more than one disc in the disc compartment.
* Do not try to open the disc compartment during playing.
* Do not touch the lens. Doing so may cause malfunction.

* If there is a scratch, dirt or fingerprints on the disc, it may cause tracking error. Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. Don't store discs in places with high temperatures or high humidity, they can become warped. After playing, store the disc in its case.

Important Note
• Before transporting the unit, remove the disc from the disc compartment.

TROUBLE SHOOTING

No power.
• Ensure the AC adaptor is connected.
• Make sure that the unit is turned on.

The remote control does not function.
• Make sure the infrared remote sensor is not blocked.
• Point the remote directly at the infrared remote sensor on the unit.
• Replace the battery in the remote with a new one.

Very little or no sound is coming from a DVD.
• Make sure that the unit is turned ON.
• Make sure the unit is not paused. Press ▶II .
• Make sure the unit is not in fast-forward or fast-reverse mode. Press ▶II .
• Make sure that the connections are correct.
• Make sure the MUTE function is not on.

The player does not start playback
• Insert the disc with the printed side facing you.
• Check that the disc can actually be played by this device.
• Check that the disc's regional code matches the player's regional code. This player's regional code is 2.
• Clean the disc.

The picture is not clear.
• The DVD is dirty. Gently clean the disc.
• The disc is scratched.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)